

CORDLESS FLARING TOOL VALUE VET-19-S OPERATING MANUAL



Professional in HVAC/R Tools

(1) Charge the battery and attach it to the main unit.



(2) Slide the expander bar to the main unit, then clamp the tube and fasten the expander bar. Make sure that the tube and expander bar are at the same level.



(3) Start flaring by pressing and holding the lower part of the switch. Flaring will be completed within 3 s when you hear a clank. Then press and hld the upper part of the switch. Loosen the switch when you hear a clank. Finally detach the expander bar from the main unit by reversing the install step.



(4) Repeat step 2 - 3 for the next flaring.

